UPS 1307 Philadelphia, PA February 7, 2006 DCA06MA022

## National Transportation Safety Board Washington, DC

## Attachment 5

UPS Boeing DC-8 Aircraft Maintenance Manual, Escape Tapes - Maintenance Practices

1 page

United Parcel Service Date: 03/13/2006; Time: 14:54:24 Software Release: 2.9.0.SP2 0819 Rev.38, Jul.01/2005

## BOEING DC-8 AIRCRAFT MAINTENANCE MANUAL

## ESCAPE TAPES - MAINTENANCE PRACTICES

1	_	Ġ	۵	n	0	r	а	9
1	20	w	~	e t	•	*	~	٠.

- A. The flight compartment escape tapes are coiled.
- 2. Escape Tapes Packing Procedures
  - A. Flight Compartment Escape Tapes
    - (1) Remove escape tape container cover.
    - (2) Coil escape tape as tight as possible and place into container.
    - (3) Install escape tape container cover.
- 3. Inspection/Check Escape Tapes
- R A. Pull tape from container by pulling end of tape.

NOTE: Tape should come down freely.

B. Check length of escape tape.

NOTE: Escape tape, when fully extended, should reach from its container, out the emergency exit, and down to the ground.

- C. Check condition of escape tape for fraying, tears, cuts, deterioration, etc.
- NOTE: Escape tape has a neoprene latex coating. Cured coating may turn brown in color when exposed to the atmosphere, this is not a cause for rejection.
- D. Check that escape tape is securely anchored to the airplane structure by hanging a heavy weight on the ground end of the tape.
- E. Pack escape tape into container.

700-798 801-894

R

25-60-02-2